

HOW TO

PAINT LIKE AN AUTO PRO

WITH THE PAINT SPECIALISTS



shopping list

- 1L Wax n Grease Remover
- 1 tack cloth
- 1 roll 24mm masking tape
- 1 roll 144mm masking paper
- 1 sheet 600g Wet n Dry sandpaper
- 1 sheet 800g Wet n Dry sandpaper
- 1 sheet 1200g Wet n Dry sandpaper
- 1 sheet 1500g Wet n Dry sandpaper
- 1x 400g Auto Primer Filler spray can
- 1x 400g Custom Auto Touch Up spray can
- 1x 400g Clear Acrylic spray can
- 1x 250g Liquid Cut n Polish
- 1x 250g Wax n Polish
- 2x Microfibre cloths
- 1x Chamois (if using water with the sandpaper)

NEED HELP SHOPPING? JUST ASK
ONE OF OUR FRIENDLY STAFF!

Find your nearest store:

ROCKHAMPTON
07 4924 7200
63 High Street

YEPPON
07 4939 1144
2 McBean Street

GLADSTONE
07 4972 9651
54 Yarroon Street

EMERALD
07 4982 4466
5 Hospital Road



www.inspcq.com.au/auto-paint

**inspirations
paint**

HOW TO

AUTO TOUCH UP SPRAY

STEP 2: PRIME

1. Prime the surface with 2-3 coats of primer, leaving 3-5mins between coats

PRODUCTS:

1 x 400g Auto Primer Filler Spray Can



STEP 3: RE-SAND + CLEAN

1. Sand primed surfaces with 600g and then 800g Wet n Dry
2. Clean the sanded surface
3. Wipe surface with tack cloth to remove dust

PRODUCTS:

600g Wet n Dry Sandpaper, 800g Wet n Dry Sandpaper, 1L Wax n Grease Remover, Tack cloth



STEP 5: POLISH

1. Use 1200g W/D sandpaper to blend the touched up edges to the original paint
2. Use 1500g W/D sandpaper lightly over the entire repaired section
3. Polish scratches out with liquid Cut n Polish using a microfibre polishing cloth

STEP 1: PREP

1. Clean the paint surface
2. Feather the edges of scratches with Wet n Dry sandpaper and dust off
3. Wipe surface with cloth to remove dust
4. Mask up to avoid overspray

PRODUCTS:

1L Wax n Grease Remover, Tack cloth, 400g Wet n Dry Sandpaper, 24mm masking tape, 144mm masking paper, Chamois (if using water with sandpaper)




STEP 4: PAINT

1. Apply 3-4 light & even coats, leaving 3-5mins between coats. Note – if you are using a metallic paint or basecoat you will need to apply a clear top coat using the same method as above
2. Leave to dry for at least 16 hours

PRODUCTS:

1 x 400g Custom Auto Touch Up Spray, 1 x 400g Clear Acrylic Spray Can

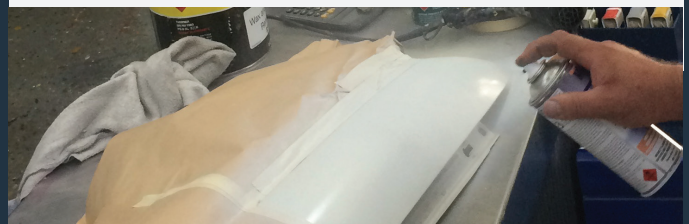

4. Wax and polish over repaired area or ideally the entire car using microfibre polishing cloth.

PRODUCTS:

1200g Wet n Dry Sandpaper, 1500g Wet n Dry Sandpaper, 250g Liquid Cut n Polish, 250g Wax n Polish, Microfibre cloths

WE STOCK ALL THE
BEST AUTO BRANDS

